AWM1014W

10kg washing machine 1400rpm white



asento

Contents

Safety information	3 - 6
Your washing machine	
Overview	7
Installation	
Removing the transport bolts	8
Choosing the right location	8
Clearance requirement	9
Leveling the Appliance	9
Procedure for adjusting the appliance feet	10
Connecting the water supply	10 - 12
Electric connection	13
Features & functions	
Control panel	14
M-Display	15
Laundry preparation	
Sorting the laundry	16
Care label specification	17
Various cycles and functions	
Table of wash cycles	18
Various cycles	19 - 20
Using your washing machine	21 - 23
Care & maintenance	24 - 26
Product support	
Troubleshooting	27 - 30
Product fiche	31 - 33
Warranty	34
Support	35
Disposal	36

Customer Service: 01204 672408
customerservice@asento.co.uk
Manufactured for:
AO Retail Limited, 5a The Parklands, Lostock, Bolton, BL6 4SD, UK

Asento is a trademark licensed to AO Retail Limited

Safety information

WARNING: IT IS HAZARDOUS FOR ANYONE OTHER THAN AUTHORISED SERVICE PERSONNEL TO CARRY OUT SERVICING OR REPAIRS THAT INVOLVE THE REMOVAL OF COVERS. TO AVOID THE RISK OF AN ELECTRIC SHOCK, DO NOT ATTEMPT TO REPAIR THIS APPLIANCE YOURSELF.

When properly cared for, your new appliance has been designed to be safe and reliable. Read and understand all safety instructions before using the appliance, and keep them nearby for future reference. These safety instructions will reduce the risk of fire, electric shock, and serious injury or death. When using the appliance, basic safety instructions must always be followed, including those on the following pages. The manufacturer declines any liability for failure to observe these safety instructions, for improper use of the appliance, or for incorrect settings of the controls.

PERMITTED USE

- This appliance is intended for household and similar applications such as staff kitchen areas in shops, offices, and other working environments; farmhouses; and by guests in hotels, motels, bed and breakfast establishments, and other residential environments.
- Children aged 8 years and above, and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, may use this appliance only if they are supervised or have been given instructions on safe use and understand the hazards involved.
- This appliance is not intended for professional use. Do not use the appliance outdoors.
- Do not load the appliance beyond the maximum capacity (kg of dry clothing) indicated in the table of wash cycles.
- The appliance is not intended to be operated by means of an external switching device, such as a timer, or a separate remote-controlled system.
- Do not wash articles that have been previously cleaned, washed, soaked, or spotted with gasoline, dry cleaning solvents, or other flammable or explosive substances as they give off vapours that could ignite or explode.
- Do not add gasoline, dry cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapours that could ignite or explode.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Do not machine-wash fibreglass materials (such as curtains and window coverings that contain fibreglass). Small particles may remain in the washer and stick to fabrics in subsequent wash loads, causing skin irritation.
- Remove all objects from pockets, such as lighters and matches.
- Make sure there is no water in the drum before opening the door.
- Never wash carpets in the appliance.
- Exercise caution when pumping out hot detergent solution.
- Do not fill the appliance with water manually during the wash cycle.
- Please close the loading door properly. If it is difficult to close, check whether any laundry is caught in the door.
- Water may reach very high temperatures during the wash cycle.
- Do not tamper with the controls.

Safety information

- Never open the door forcibly or use it as a step.
- Do not allow anyone to climb, lean, or hang on any part of the appliance, including any protruding components such as the appliance door or a pull-out shelf.
- Never place small appliances, such as a microwave oven or jar cooker, on the machine.
- Keep the machine away from naked flames and heat sources, such as candles, cookers, and liquefied gas containers.
- Never place pressurised containers on the machine.
- Always follow the fabric care instructions recommended by the clothing manufacturer.
- Check the water inlet hose connections on a regular basis to ensure that they are tight and not leaking.
- Do not operate the appliance if parts are missing or broken.
- Do not operate the appliance until you are sure that:
  - The appliance has been installed according to the installation instructions.
  - All water, drain, power, and grounding connections are in compliance with all local regulations and/or other applicable regulations and requirements.

INSTALLATION

- The appliance must be handled and installed by two or more persons – risk of injury. Use protective gloves to unpack and install – risk of cuts.
- Keep children away from the installation site.
- After unpacking the appliance, make sure that it has not been damaged during transport. In the event of any problem, contact the dealer or your nearest After-Sales Service.
- During installation, make sure the appliance does not damage the power cable – risk of fire or electric shock.
- When moving the appliance, do not lift it by the knobs or the detergent drawer; lift it only by the worktop or top lid. During transport, never rest the door on the trolley.
- The appliance is fitted with transport bolts to prevent any possible damage to the interior during transport. Before using the machine, it is imperative that the transport bolts are removed. After their removal, cover the open transport bolt holes with the four cover caps.
- The appliance must be installed and operated in a room with a drain.
- Keep the environment dry and ventilated.
- Never place the machine over the opening of an uncovered drain.
- Do not install the appliance where it may be exposed to extreme conditions, such as: poor ventilation, temperatures below 5°C or above 35°C.
- Do not expose the appliance to corrosive or explosive gases (for example, dust, steam, or gas).
- Do not install the appliance in a bathroom or in a very damp room.
- The appliance should not be in an outdoor environment, not even where the area is sheltered, because it may be very dangerous to leave it exposed to damp, rain, and thunderstorms.
- When installing the appliance, make sure that all four feet are stable and resting on the floor. Adjust them as required and check that the appliance is perfectly level using a spirit level.

Safety information

- The appliance must not be installed behind a lockable door, a sliding door, or a door with a hinge on the opposite side to that of the appliance in such a way that the appliance door cannot be opened fully.
- The appliance must be disconnected from the power supply before any installation operation – risk of electric shock.
- Installation, including water supply (if any), electrical connections, and repairs, must be carried out by a qualified technician.
- Connect the water inlet hose(s) to the water supply in accordance with the regulations of your local water company.
- Use only the new water inlet hose(s) supplied with the appliance to connect the appliance to the water supply. The old water inlet hose(s) should not be reused.
- The supply water pressure must be in the 0.03—1.0 MPa range.
- Make sure that the ventilation openings in the base of the appliance (if available on your model) are not obstructed by a carpet or other material.
- After installation of the appliance, wait a few hours before starting it so that it acclimates to the environmental conditions of the room.
- Once installed, packaging waste (plastic, Styrofoam parts, etc.) must be stored out of reach of children – risk of suffocation.
- Only activate the appliance when the installation has been completed.

ELECTRICAL WARNING

- It must be possible to disconnect the appliance from the power supply by unplugging it if the plug is accessible, or by a multi-pole switch installed upstream of the socket in accordance with the wiring rules, and the appliance must be earthed in conformity with national electrical safety standards.
- When the appliance is installed, the mains socket must be within easy reach.
- When heating, the maximum current of the appliance is 10A, so please make sure that the power supply system (voltage, current, and the cable) is applicable to the load of the appliance.
- In order to ensure your safety, you must plug the cable into a socket that is connected to earth. Please check your socket to make sure that it is connected to a reliable earth correctly.
- Do not use extension leads, multiple sockets, or adapters.
- The electrical components must not be accessible to the user after installation.
- Do not operate the appliance when you are wet or barefoot.
- Do not operate the appliance if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.
- If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard – risk of electric shock.
- Disconnect the power cord by grasping the plug, not the cord.

Safety information

CLEANING AND MAINTENANCE

WARNING: ENSURE THAT THE APPLIANCE IS SWITCHED OFF AND DISCONNECTED FROM THE POWER SUPPLY AND TURN OFF THE WATER TAP BEFORE PERFORMING ANY MAINTENANCE OPERATION; NEVER USE STEAM CLEANING EQUIPMENT – RISK OF ELECTRIC SHOCK.

- Use caution when draining hot water from the drum, such as during pump maintenance.

SERVICE

- Do not repair or replace any part of the appliance or attempt any service unless specifically stated in the user manual. Use only authorised After-sales Service. Self or non-professional repair may lead to dangerous incidents resulting in life-threatening injuries and/or significant property damage.
- In the event of a fault and/or malfunction, turn off the appliance, close the water tap, and do not tamper with the machine. Immediately contact the customer service team and only use original spare parts. Failure to observe these instructions may jeopardise appliance safety.
- Certain internal parts are intentionally not grounded and may present a risk of electric shock during servicing. Service personnel – do not contact the following parts while the appliance is energised: inlet valve(s), drain pump, heat sink of the motor controller, PCBs.
- Always unplug the appliance from the power supply before attempting any service. Disconnect the power cord by grasping the plug, not the cord.
- Before the appliance is removed from service or discarded, remove the door to prevent children from playing or hiding inside. Also, remove the power cord/plug.

CHILDREN


Very young children (0-3 years) should be kept away from the appliance. Young children (3-8 years) should be kept away from the appliance unless continuously supervised. Children from 8 years old and above can use this appliance only if they are supervised or have been given instructions on safe use and understand the hazards involved.
Do not allow children and pets to play on or in the appliance. Close supervision of children is necessary when the appliance is used near children.
Make sure to utilise all child lock/safety functions of the appliance, and be sure to turn the appliance off when not in use.
Cleaning and user maintenance must not be carried out by children without supervision. Keep all laundry aids (including detergent, bleach, fabric softener, etc.) out of the reach of children.
To reduce the risk of poisoning or chemical burns, keep all cleaning products out of the reach of children. Keep pets away from the appliance.

WARNING: THE COMPANY DENIES ALL LIABILITY IF AND WHEN THESE NORMS ARE NOT RESPECTED.

Your washing machine

Overview

Description of parts

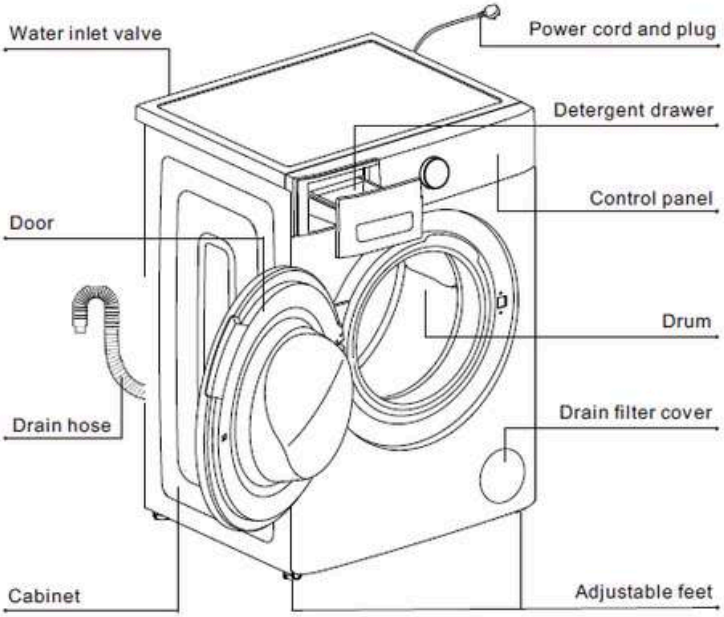


User manual	Water inlet hose	Wrench	Cover caps
1copy	1pcs	1 pcs	4pcs
			

Installation

Removing the transport bolts

WARNING: DAMAGE TO THE APPLIANCE OR INJURY POSSIBLE.

- The appliance is secured for transport with transport bolts. Transport bolts that are not removed can damage the drum during operation of the washer; the appliance will vibrate, and it will be much noisier during spin cycles if the transport bolts are not removed before use. Be sure to remove all 4 transport bolts completely before first use. Keep the transport bolts. If a pedestal was purchased with the appliance, it must be installed first, prior to removing the transport bolts. Please consult the pedestal installation instructions.
- In order to prevent transport damage during later transport, be sure to re-install the bolts before transport.
- Undo the four transport bolts A with the wrench (supplied) and remove them.
- Remove the four spacer tubes B. During the removal of the bolts, occasionally spacer tubes fall inside the machine; these can be removed by tilting the machine forward and recovering them from the floor or inside the base of the machine.
- Cover the open transport bolt holes with the four cover caps C which you will find in the plastic bag containing the accessories.

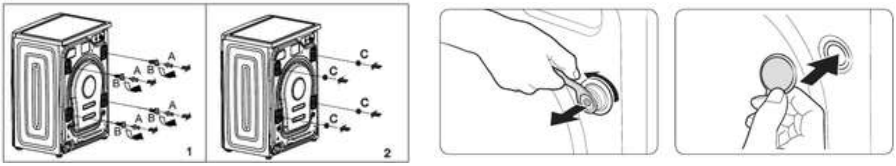

Keep all the parts in a safe place: you will need them again if the washer needs to be moved to another location.

IMPORTANT: Transport the washer to prevent breakage as follows:

- The transport bolts are reinstalled.
- The power cord is secured to the back of the washer.


Choosing the right location

- The machine should be installed on a solid, flat floor; never place the machine on a soft carpet or on a wooden floor. Do not install the machine on a homemade plinth. If the installation location cannot be changed, the plinth must be improved as required, such as enlarging the size or securing it with brackets.
- Never place the machine on separate brackets. It is possible for the machine to move a little due to factors such as overloading or the condition of the plinth (e.g. if it is wet).
- Keep the environment dry and ventilated.
- The appliance must be installed and operated in a room with a drain.
- Never place small appliances, such as a microwave oven or mini cooker, on the machine.
- Keep the machine away from open flames and heat sources, such as candles or a cooking stove.
- Never place pressure containers on the machine.
- Never position the machine over the opening of an uncovered drainage.

Installation

Clearance requirement

Install the appliance with easy access to the power plug and socket.

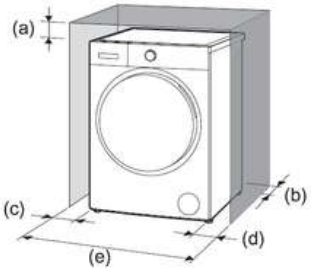

- Install the appliance where there is enough space around it.
  - (a) 3cm or more above
  - (b) 5cm or more behind
  - (c) 5cm or more on the left side
  - (d) 5cm or more on the right side
  - (e) 70cm or more

WARNING: DO NOT LET METALLIC PORTIONS OF THE APPLIANCE COME INTO CONTACT WITH METAL SINKS OR OTHER APPLIANCES.

Levelling the Appliance

Importance of Leveling the Appliance

The appliance uses high spin speeds to remove water at the end of the wash cycle. It is important that the appliance is level and that the appliance feet press with equal pressure against the floor. This will help ensure the quietest, most vibration-free use of the appliance.


Follow these steps:

- Install the appliance on a level and solid surface. Preferably in a corner of a room.
- If the floor is uneven (or out of level), adjust the appliance feet as required to level the appliance. Do not place anything under the appliance feet to help level the appliance.
- Extend the appliance feet no more than is necessary. The more the feet are extended, the more vibration the appliance will experience. Start with the appliance feet turned all the way in and adjust each foot as necessary.
- Use a bubble level (not supplied) to check the top of the appliance to make sure it is level side to side and front to rear.
- Press down on each corner of the appliance top to make sure the appliance doesn't "wobble." There should be no "give" or movement. All the appliance feet should press equally against the floor. This is just as important as the appliance being level to prevent vibration.
- When the appliance is level and does not wobble, lock the appliance feet in place by tightening the locknuts against the washer bottom. Be sure to do this without changing the height of the foot (hold the foot while tightening the locknut).

Installation

Procedure for adjusting the appliance feet


- After determining which the appliance feet need to be extended, have someone lift up on the appliance slightly to take pressure off the foot to be adjusted.
- Turn the appliance foot to extend it downward as far as necessary to raise the corner of the appliance the correct amount to level the appliance.
- When the height of the foot is correct, use the wrench (supplied) to tighten the locknut against the appliance bottom to lock the foot in place.

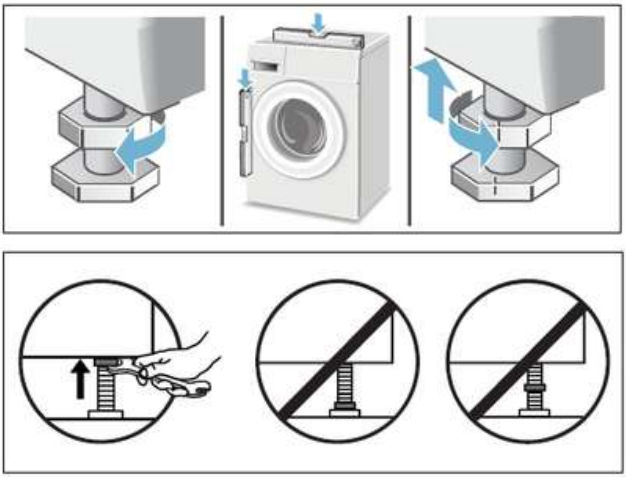

Connecting the water supply

Connecting the water inlet hose

- Connect one end of the water inlet hose to a cold water tap and tighten by hand (see figure). Before performing the connection, allow the water to run freely until it is perfectly clear.

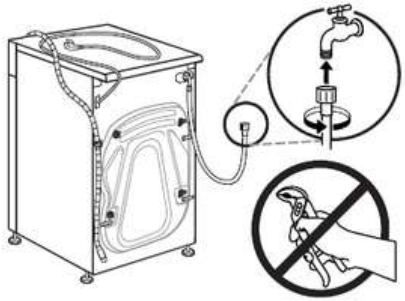

Installation

- Connect the other end of the water inlet hose to the water inlet valve on the rear of the appliance and tighten by hand.




Turn on the tap slowly and make sure there are no leaks.

- Do not twist, squash, modify or cut the hose.
- Tighten the end of the hose firmly by hand.
- The supply water pressure must be in the 0.03—1.0 MPa range. If the water pressure exceeds this value, please fit a pressure reducing valve.
- If the hose is not long enough, contact a specialised or an authorised technician.
- Never use a second-hand water inlet hose.
- Use the new water inlet hose supplied with the appliance.

Connecting the drain hose

- Height of drain point
- Height difference between the floor and drainage
- point: min. 60 cm (24 in.) and max. 100 cm (39 in.).

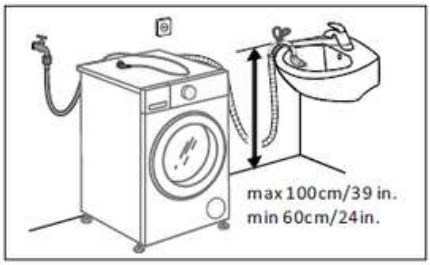

Types of drainage hook-ups


- Standpipe



Attach the drain hose to the elbow. Position the elbow on the drain hose 4" (100mm) from the end of the hose as shown. Insert this section of the drain hose into the drain pipe. If the hose is pushed down too far, this may cause the washer to self-siphon, i.e. continuously empty as it is filling. Secure the elbow and hose with a cable tie to keep the hose from coming out of the drain pipe during use.

Installation

Sink siphon

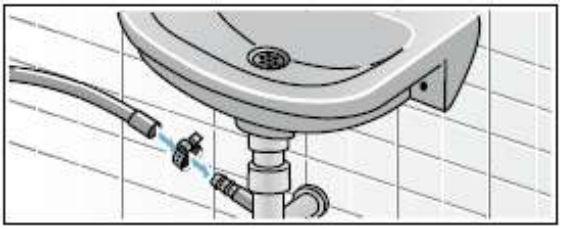

Secure the drain hose to the sink siphon using a Ø 0.9-1.6 in. (20-44 mm) hose clip (available from a DIY store).

Wash Basin


WARNING: SCALDING

When washing at high temperatures, there is a risk of scalding if you touch hot suds, e.g. when pumping out hot suds into a wash basin.

Do not reach into the hot suds.


IMPORTANT: Appliance damage/damage to textiles

If the end of the drain hose touches the discharged water (water drained from the washer), it (the discharged water) can be sucked back into the washer and may damage the appliance or textiles.

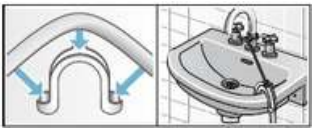

Make sure that:

- There is no stopper in the sink drain.
- The end of the drain hose does not touch the discharged water.
- The sink drain is free-flowing and not partially clogged.
- Attach the drain hose securely to the wash basin.
- Do not twist, pull out or bend the drain hose.
- Secure the drain hose with the cable tie to the drain pipe, wash basin, etc., so the hose does not pull out from the force of the water.
- We advise against the use of drain hose extensions; in case of absolute need, the extension must have the same diameter as the original hose and must not exceed 250 cm in length.

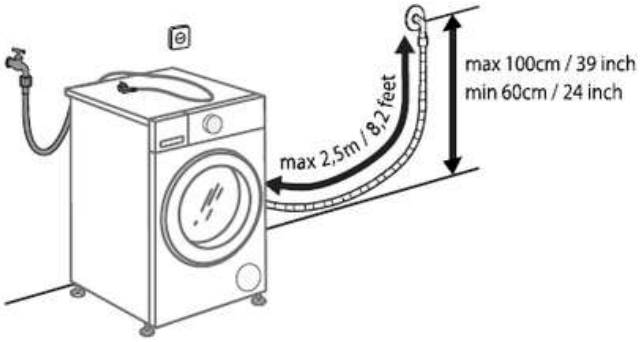

Installation

Electric connection

Before plugging the washer into the mains socket, make sure that:

- The socket is earthed and in compliance with the applicable law.
- The socket is able to sustain the appliance's maximum power load indicated on the Technical Data Plate fixed on the machine.
- The supply voltage is included within the values indicated on the Technical Data Plate fixed on the appliance.
- When heating, the maximum current of the appliance is 10A, so please make sure that the power supply system (voltage, current and the cable) is applicable to the load of the appliance.
- The socket is compatible with the washer's plug. If this is not the case, replace the socket or the plug with a qualified electrician.

WARNING: THIS APPLIANCE MUST BE EARTHED. THE FOLLOWING OPERATIONS SHOULD BE CARRIED OUT BY A QUALIFIED ELECTRICIAN.

Replace the supply cable:

If the supply cord is damaged, it must be replaced with an identical one by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard – risk of electric shock.

Disposing of the plug:

Ensure that before disposing of the plug itself, you make the pins unusable so that it cannot be accidentally inserted into a socket.

Disposing of the appliance:


When disposing of the washer, please remove the plug by cutting the mains cable as close as possible to the plug body and dispose of the plug as described above.

- The appliance is not intended to be operated by means of an external switching device, such as a timer, or a separate remote-controlled system.
- When the appliance is installed, the mains socket must be within easy reach.
- Do not use extension cables, multiple sockets or adapters.
- To remove the plug from the socket, grasp the plug firmly and pull it out. Do not pull at the cable.
- The electrical components must not be accessible to the user after installation.
- Do not connect the machine to electrical outlets while your hands are wet or damp.
- Do not operate this appliance when you are wet or barefoot.
- Do not operate this appliance if it has a damaged power cable or plug, if it is not working properly, or if it has been damaged or dropped.

WARNING: THE COMPANY DENIES ALL LIABILITY IF AND WHEN THESE NORMS ARE NOT RESPECTED.

Features & functions

Control panel

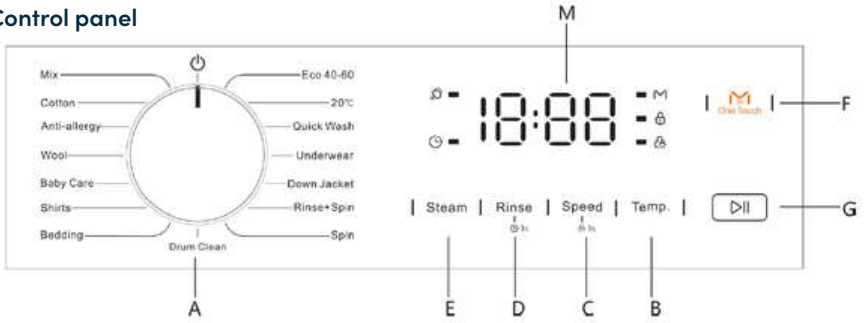

1. WASH CYCLE SELECTOR DIAL: Used to set the desired wash cycle (see “Table of wash cycles”).

- OFF position: Turn the linear mark on the wash cycle selector knob under the symbol “ ” to switch the machine off. If the machine is switched off during a wash cycle, this wash cycle will be cancelled.

2. TEMP button: Press to change the water temperature for the current cycle. There are five temperature values on the display. When a temperature value is selected, the corresponding temperature value indicator light illuminates on the display.
3. SPEED button: Press to change the spinning speed for the current cycle. There are five spinning speed values on display. When a spinning speed value is selected, the corresponding spinning speed value indicator light illuminates on the display.

- CHILD LOCK function: When the cycle is running, long press the SPEED button for 3 seconds to set or cancel the Child Lock function. For a detailed description, see → Various cycles and functions.
- CANCELLING the buzzer: Press and hold the SPEED button and ONE TOUCH button together at the same time for at least 3 seconds; you can turn off the buzzer that sounds during the washing cycle. For a detailed description, see → Various cycles and functions.

4. RINSE button: Press to change the rinse count for the current cycle; the changed rinse count appears on the digital display.

- DELAY END function: Press and hold the RINSE button for 3 seconds before the programme runs to set the "DELAY END" function. The "DELAY END" function of some programmes is limited. For a detailed description, see → Various cycles and functions.

5. STEAM button: Press to set the STEAM wash cycle. For a detailed description, see → Various cycles and functions.
6. ONE TOUCH button: Press to set the ONE TOUCH wash cycle. For a detailed description, see → Various cycles and functions.
7. START/PAUSE button: Long press the button to start or pause a wash cycle.


- Add clothes while the programme is running:

Once the cycle has begun, if you want to pause the wash cycle, please long press the button again. If the DOOR LOCK indicator light is off, the door may be opened; you can add or take out laundry. To start the wash cycle from the point at which it was interrupted, press the button again. For a detailed description, see → Various cycles and functions.

Features & functions

M-Display

- The display is useful when programming the machine and provides a great deal of information.

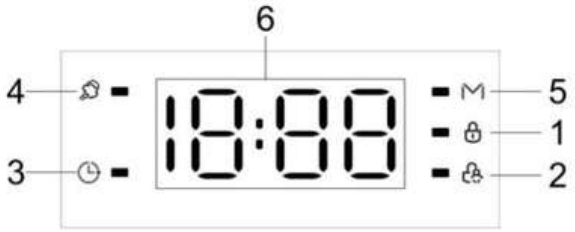


1. DOOR LOCK indicator - the lit indicator light indicates that the door is locked - To prevent any damage, wait until the indicator light turns off before opening the door. To open the door while a cycle is in progress, press the START/PAUSE ▷II button. If the DOOR LOCK indicator light is off, the door may be opened.
2. CHILD LOCK indicator - the lit indicator light indicates the CHILD LOCK function is activated; the control panel is locked.
3. DELAY END indicator - the lit indicator light indicates the DELAY END function is activated. The countdown to the end of the selected wash cycle will appear on the digital display.
4. STEAM indicator - the lit indicator light indicates the STEAM function is activated.
5. ONE TOUCH indicator - the lit indicator light indicates the One Touch wash programme is selected. There are two ways to set the One Touch wash programme.
6. DIGITAL DISPLAY -

- Remaining time of the wash cycle 
- Delay end time 
- Wash temperature 
- Rinse count 
- Fault code 

Laundry preparation

IMPORTANT: Damage to the washer/fabric

Foreign objects (e.g. coins, paper clips, needles, nails) may damage the laundry or components in the appliance. Therefore, note the following tips when preparing your laundry:

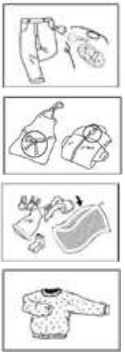



- Remove any loose items or metal objects, such as safety pins, paper clips, etc., from the laundry.
- Brush sand, coins, etc. out of pocket and cuffs.
- Close zips and button up cushion covers, duvet covers, etc.
- Remove curtain runners, or secure them in a net bag.
- Particularly delicate items, such as tights or lace curtains, or smaller items, such as socks or handkerchiefs, should only be washed in a net bag or pillowcase.
- Some items are best turned inside out. These include knitwear, trousers, T-shirts, and sweatshirts.
- Make sure that the wire-cup bras are machine washable.

IMPORTANT: Make sure that wire-cup bras are placed in a pillowcase that can be securely closed with a zip or button. If the wire works itself out of the cup, it may fall through the holes of the drum and cause extensive damage.

Sorting the laundry

Sort laundry items according to colour, degree of soiling, and recommended wash temperature range.

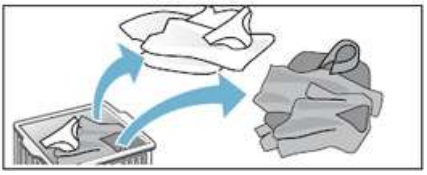

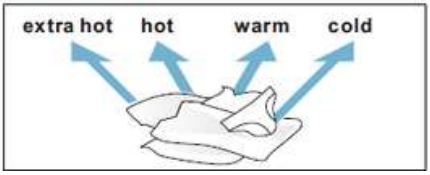

- Items of clothing can become discoloured.
- Never wash new multi-coloured items together with other items.
- Wash white items separately from coloured items. Otherwise, white items may tend to become grey.

Degrees of soiling:

Light soiling - No visible soiling or stains, but may have absorbed some odour. This could include lightweight summer clothes such as T-shirts, shirts, or blouses worn once. It may also apply to freshen bed linen or towels.

Normal soiling - Visible soiling and/or a few light stains. This could include clothing such as T-shirts, shirts, or blouses that have been sweated in or worn several times. It may also include tea towels, hand towels, or bed linen used for up to one week or more. Curtains without stains that have not been washed for up to half a year.

Heavy soiling - Visible soiling and stains. This could include kitchen towels, fabric napkins, baby bibs, children's outer clothing, or football jerseys and shirts stained with grass or dirt. It could also include working clothes such as overalls and jeans and other clothing worn for outside work and activities.

Laundry preparation

Sorting laundry according to their care label specifications

The symbols on labels of your garments will help you in choosing the suitable wash programme, the right temperature, wash cycles, and ironing methods. Don't forget to take a look at these useful symbols.



Various cycles and functions

Table of wash cycles

Wash cycle	Temp. ℃ (Max)	Max.Load (kg)	Description	Kind of detergent		
				Detergents		softener
				Universal	Special	
Mix	60	10	For washing lightly to normally soiled mixed load of cotton and synthetic fabrics, white	L / P	---	O
Cotton	60	10	For daily items of cotton, linen and cotton blends	L / P	---	O
Anti-allergy	85	3	For clothes that need to remove mites and allergens.	L / P	---	O
Wool	40	1	For machine washable wool and wool blend clothes	---	L / P	O
Baby Care	85	5	a cycle designed for dirt typical of children's garments in that it effectively removes any traces of residual detergent	L / P	L	O
Shirts	60	3	For shirts and women's blouses	L / P	L	O
Bedding	60	6	For large items such as blankets, curtains and bedspreads	L / P	---	O
Eco40-60	40	10	Energy efficiency test program	L / P	---	O
20℃	30	2	For small amount of clothes that areeasy to fade , the washer using only coldwater without utilized the washer's	L / P	---	O
Quick Wash	40	1	For small amount or lightly soiled garments that you want to finish washing quickly	L / P	---	O
Underwear	60	5	For underwear.	L / P	L	O
Down Jacket	40	2	For down jacket which can be washed by machine	---	L / P	O
Rinse +Spin	---	10	Combines a rinse and spin for loads requiring an addational rinse cycle. Also use for loads that require rinsing only	---	---	O
Spin	---	10	This cycle uses a spin to shorten drying times for heavy fabrics or special-care items washed by hand	---	---	---
Drum clean	85	---	Clean the drum by removing dirt and bacteria from the drum. Make sure the drum is empty	---	---	---
M-Smart	40	5	Special cycle which can be started simply by pressing the ONE-TOUCH button.	L / P	---	O

- L=gel/liquid detergent P=Powder detergent O=Optional ---=No
- If using liquid detergent, it is not recommended to activate the time delay.
- Please follow the dosage recommendation on the powder or liquid detergent package.
- We recommend using:
  - Laundry powder 20°C to 80°C
  - Wool detergent 20°C to 40°C

Various cycles and functions

Various cycles

M-Smart wash cycle

M-Smart wash cycle can intelligently detect the weight of laundry and match different washing times and temperatures to optimise washing performance automatically. "M-Smart" is displayed in the detection stage after the cycle is started, and the M-Smart wash cycle can be entered by the following two methods.


- When the appliance is ON, press and hold the ONE-TOUCH button for at least 3 seconds; the appliance will run the M-Smart wash cycle directly, with the M-Smart indicator light M lit.
- When the appliance is ON, short press the ONE-TOUCH button; the M-Smart indicator light is lit, and then press the START/PAUSE button. The appliance runs the M-Smart wash cycle.

Special wash cycles

- Baby care: a cycle designed for dirt typical of children's garments in that it effectively removes any traces of residual detergent.
- Down Jacket: a cycle to wash single downs (the weight of which should not exceed 2.0 kg), cushions or clothes padded with goose down, such as a puffa jacket. Use this special wash cycle. We recommend that downs are placed in the drum with their edges folded inwards (see figure) and that no more than 3/4 of the total volume of the drum is used. To achieve the best results, we recommend that a liquid detergent is used and placed inside the detergent dispenser drawer.

Wool: a cycle designed for wool fabrics.

- Before washing, please check the washing label for "machine washable".
- After the procedure is completed, please take out the clothes quickly, shape and dry them to avoid deformation caused by being placed in the drum for too long.
- To prevent clothes from being damaged, the water temperature should not exceed 40°C.
- For best results and to reduce the damage to clothes, please use a special detergent for wool and do not exceed 1.0 kg of laundry.

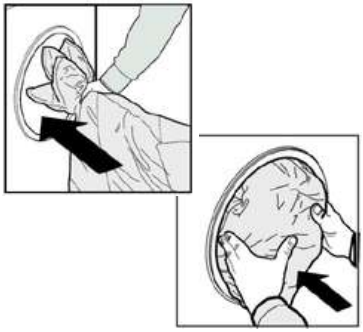

DELAY END function can set the programme end (Delay End) time in one-hour increments to a maximum of 24 hours. After selecting the desired washing programme but before pressing the START/PAUSE button, long press the RINSE button until the desired time is displayed, e.g. 8 hours, with the DELAY END indicator light lit.

IMPORTANT: The cycle duration is included in the set Delay End time.

Here is an example of a 1 hour 30 minute cycle time and an 8 hour Delay End time. 8 hours is displayed and counts down (approximately 6 hours 30 minutes) until the washing cycle begins (at 1 hour 30 minutes), then the cycle duration of 1 hour 30 minutes is displayed and begins. The total time is approximately 8 hours. The way to cancel the Delay End function:

Turn the wash cycle selector knob to reset the wash cycle. The DELAY END indicator light goes out.

IMPORTANT: Delay End function cannot be set in some wash cycles.

The actual end time of the wash cycle may be different from the set Delay End time depending on the water supply pressure, drainage, clothing type, water temperature, and other conditions.

Various cycles and functions

STEAM: A cycle designed for cotton clothes that are not easy to fade.
Steam treatment can reduce the wrinkles of clothes, make the clothes reach the ideal humidity level, reach the most relaxed state, and make ironing easier. Steam treatment can get rid of any odours on clothes.

Child lock

- Setting the Child lock function can avoid accidental use by children and external interference with the washing procedure.
- During operation, long press the SPEED button for 3 seconds to set or cancel the Child lock function.
- After the Child lock function is set, the Child lock indicator light is lit, the door cannot be opened, the control panel is locked, and all buttons on the control panel do not respond. You can turn off the machine by turning the linear mark on the wash cycle selector knob under the symbol.
- After the Child lock function is set, you can turn off the machine by turning the wash cycle selector knob. When the machine is turned on again, it directly runs the programme before turning off.

Add clothes during the programme is running
When the programme is running, long press the START/PAUSE button to pause the machine. If the DOOR LOCK indicator light is off, the door may be opened, and you can add or take out laundry. After the operation is completed, close the door, long press the START/PAUSE button again, and the machine continues to run from the point at which it was interrupted.
IMPORTANT: If the water level or water temperature in the drum is too high, the door lock indicator light is lit, and the door cannot be opened or clothes cannot be added or taken out during the programme running.

Cancelling the buzzer
Press and hold the SPEED button and ONE TOUCH button together at the same time for at least 3 seconds to turn off the buzzer that sounds during the washing cycle.

- To activate the buzzer setting, do the same operation as you did for cancelling. The buzzer setting is activated after one beep.

Load balancing system
The appliance has an automatic detection system for eccentric load. In the process of spinning, if the clothes are unevenly distributed, the appliance will level and adjust the clothes until they are evenly distributed before spinning. If the clothes cannot be evenly distributed within the specified time, the appliance will not spin to avoid severe vibration of the machine. At this time, you need to check whether the clothes are knotted or entangled and select the "Spin" programme after reorganising the clothes. When washing fewer clothes, such as a pair of jeans, a sweater, a bath towel, etc., the machine may not complete the spinning process due to balance protection. Please wash the large and small clothes together as much as possible to make the clothes easier to release evenly and complete the spinning process smoothly.

IMPORTANT: Due to the different types and materials of the laundry, the automatic adjustment and balance system of the appliance may level and adjust the clothes many times to prolong the spinning time. This is a normal phenomenon, not a machine failure.

Using your washing machine

Before loading your first load of laundry

Your new appliance was tested before leaving the factory. This process involves running various wash cycles. As a result, a small amount of water may remain in the tub and drainage system. Run a Drum Clean cycle with no laundry and no detergent to clean the system before your first load of laundry.

Daily use - preparing the laundry

EMPTY POCKETS

- Coins, paper clips, etc. could damage the load and the washing machine components.
- Tissues will break down during the wash cycle and the fragments will have to be subsequently removed by hand.

CLOSE ALL ZIPPERS, BUTTONS, AND HOOKS - TIE ALL RIBBONS OR BELTS

- Insert the smaller garments (e.g. nylon hosiery, belts, etc.) and garments with hooks (e.g. bras) into a fabric bag or a pillowcase with a zipper. Remove any rings from curtains, or else place the curtains inside a fabric bag together with the rings.

FABRIC TYPE/SYMBOL ON THE WASH LABEL

- Cottons, mixed fibres, easy care/synthetics, wool, hand wash items.
- Colour - separate coloured and white items. Wash new coloured articles separately.
- Size - wash items of different sizes in the same wash load to improve washing efficiency and distribution of the articles in the drum.
- Delicates - wash delicate items separately; they require gentle treatment.

How to use the appliance

- Load laundry - Open the door and load the laundry. Load the articles one at a time loosely into the drum, without overfilling. Observe the load sizes given in the "Table of wash cycle". Overloading the machine will result in unsatisfactory washing results and creased laundry.
- Close door - make sure that no laundry gets stuck between the door glass and rubber seal. Close the door so that you can hear it click shut.
- Open water tap - make sure that the appliance is connected to the water mains. Open the water tap.
- Set the desired programme - select the required programme with the WASH CYCLE SELECTOR knob. The duration of the wash cycle is shown on the display. The washing machine automatically displays the default temperature and spin speed settings possible for the selected programme. Adjust the temperature and/or spin speed setting if needed with the relevant buttons.
- Change temperature, if needed - press the TEMP. button to progressively lower the temperature setting until a cold wash has been set (all temperature value indicators light go out on the display). Pressing the button again sets the highest possible setting.
- Change spin speed, if needed - press the SPEED button to progressively decrease the spinning speed until the spin cycle is turned off (all spinning speed value indicators light go out on the display). Pressing the button again sets the highest possible setting.
- Select options, if needed - press the button(s) to select the option; the corresponding option indicator light is on. Press the button(s) again to cancel the option; the corresponding indicator light goes out.
- If the selected option is incompatible with the programme set, the incompatibility will be signalled by a buzzer and the corresponding option indicator light will flash.
- If the selected option is incompatible with another previously set option, only the most recent selection will remain active.

Using your washing machine

Adding detergent

Pull out the detergent dispenser and add detergent (and additives/softener) into the relevant compartments as described below.


Compartment 1: Powder washing detergent

Compartment 2: Liquid washing detergent

The liquid detergent must not exceed the "MAX" level.

Compartment 3:

Additives (Softener, etc.) The fabric softener must not exceed the "MAX" level.

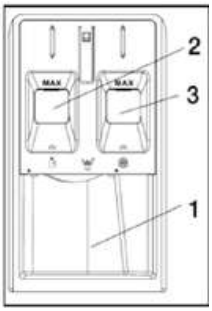

Observe the dosing recommendations on the detergent pack.

Correct dosing of detergent/additives is important because:

- It optimises the cleaning result.
- It avoids irritating residues of surplus detergent in your laundry.
- It saves money by avoiding waste of surplus detergent.
- It protects the washer by avoiding calcification of components.
- It respects the environment by avoiding unnecessary environmental burden.

Do not use hand washing detergents because these create too much foam.

Use powder detergent for white cotton garments, for pre-washing, and for washing at temperatures over 60°C.

Follow the instructions given on the detergent packaging.

Delaying the end of a programme

- Delaying the end of a programme
- Pull out the detergent dispenser and add detergent (and additives/softener) into the relevant compartments as described below.

Start programme

- Press the START/PAUSE button. The relevant indicator light is lit, the door locks, and the DOOR LOCK indicator light is lit.
- To avoid overflow, do not open the detergent dispenser during a running programme anymore.
- The remaining programme duration may vary. Factors like unbalance in the wash load or foam formation can have an effect on the programme duration.

Change the settings of a running programme, if needed.

You can still change the settings while a programme is running. The changes will be applied, provided the respective programme phase has not finished yet.

- To change the settings of a running programme:
- Press the START/PAUSE button to put the running programme on pause.
- Change your settings.
- Press the START/PAUSE button again to continue the programme.

If you have changed the programme, do not add detergent for the new programme.

To prevent a running programme from being changed by accident (for instance by children), use the CHILD LOCK function (see section "Control panel / SPEED").

Using your washing machine

Pause a running programme and open the door, if needed.

Press the START/PAUSE button to pause a running programme.

If the water level and/or temperature in the drum are not high, the DOOR LOCK indicator light turns off. You can open the door, for example, to add more laundry or to remove laundry that was loaded by mistake. Press the START/PAUSE button again to proceed with the programme.

Cancelling a running programme, if needed:

- Turn the linear mark on the wash cycle selector knob under the symbol " ⏻ " to switch the machine off.
- If the water level and/or temperature are low enough, the door is unlocked and can be opened.
- The door remains locked if there is a higher water level in the drum. To unlock the door, firstly turn the wash cycle selector knob to select the spin programme, then press the SPEED button to set the spin programme off (all spinning speed value indicator lights go out on the display).
- Press the START/PAUSE button to run the spin programme. The water is pumped out from the drum during the cycle. The door unlocks at the end of the programme.

Switch off the appliance after programme end:

- At the end of the cycle, the message "End" is shown on the digital display.
- The door can only be opened when the DOOR LOCK indicator light goes out.
- Check that the DOOR LOCK indicator light is off, then open the door and take out the laundry.
- Turn the linear mark on the wash cycle selector knob under the symbol " ⏻ " to switch the machine off.

Leave the door ajar to let the interior of the appliance dry.

Care and maintenance

Your appliance is designed to give you years of service. Observe the following instructions to maintain and protect your appliance and keep it in top operating condition.

WARNING: RISK OF ELECTRIC SHOCK HAZARD

- To avoid the risk of electric shock, always disconnect the appliance from the power outlet prior to cleaning.
- Never clean the appliance with a pressure washer.

Cutting off the water and electricity supplies

- Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the appliance and help to prevent leaks.
- Unplug the appliance when cleaning it and during all maintenance work.

Cleaning the appliance's exterior

WARNING: RISK OF EXPLOSION

To avoid the risk of explosion, never clean the appliance with flammable solvents.

Clean the appliance's exterior surface when required as follows:

- Use hot soapy water or a mild (non-abrasive) cleaning agent.
- Rub the exterior surface of the appliance dry with a soft towel.
- Remove residue immediately.
- Do not use high-pressure spray.

Cleaning the drum

Metallic debris left in the drum can produce rust spots on the drum. Never use steel wool to try to remove these. Use a chlorine-free cleaning agent and follow the manufacturer's instructions.

Descaling the appliance

Provided that you use the correct amounts of detergent with your wash loads, descaling is not necessary. If descaling the appliance drum does become necessary, please follow the descaling product manufacturer's instructions.

Small amounts of descaling agent can be used to remove white spots on the washer drum caused by lime or mineral deposits or small amounts of rust caused by metal objects left in the drum.

IMPORTANT: Descaling agents contain acids which may attack parts of the appliance and may discolour the laundry.

Caring for the door and drum of your appliance

Always leave the porthole door ajar in order to prevent unpleasant odours from forming.

Checking the water inlet hose


Check the water inlet hose at least once a year. If there are any cracks, it should be replaced immediately; during the wash cycle, water pressure is very strong and a cracked water inlet hose could easily split open.

- Never use a second-hand water inlet hose.

Care and maintenance

Cleaning the detergent dispenser


If there is a build-up of residual detergent or additives, or if the softener compartment is not rinsed out well enough, it may be helpful to clean the dispenser.

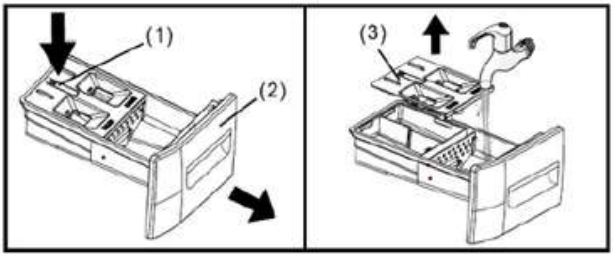

- Open the detergent dispenser tray fully. Press down on the drawer catch (1) and pull the tray (2) from the appliance housing.
- Remove the liquid detergent cover (3) by grasping it and pulling it upwards from the detergent dispenser tray.
- Clean the liquid detergent cover and the detergent dispenser tray by holding it under running water. Lightly wipe away any remaining detergent residue.
- Attach the liquid detergent cover and slide the detergent dispenser tray back in place and close the tray securely.
- TIP: Do not operate the appliance without the detergent dispenser tray in place. Always keep the tray completely closed.

Cleaning the mesh filter in the water inlet hose and the water inlet valve


- Close the water tap and unscrew the water inlet hose.




- Clean the mesh filter at the hose's end carefully with a fine brush.



- Now unscrew the water inlet hose on the back of the appliance by hand. Pull out the mesh filter from the water inlet valve on the back of the appliance with pliers and carefully clean it.

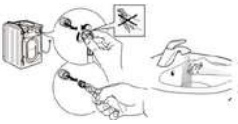

- Insert the mesh filter again. Connect the water inlet hose to the water tap and the appliance again. Do not use a tool to connect the inlet hose. Open the water tap and check that all connections are tight.

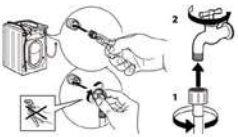

Care and maintenance

Cleaning the drain pump

WARNING: RISK OF SCALDING – RISK OF HOT WATER INJURY TO SKIN

You are responsible for ensuring all safety precautions are followed when draining water from the appliance and/or manually opening the appliance door.

It may be necessary to clean the appliance drain pump if the appliance fails to drain (the sound of the water being pumped from the appliance cannot be heard when the appliance should be draining and other nearby drains, such as a sink, are draining properly).

The appliance pump can become blocked by loose debris (a good reason to check the drum and remove any visible debris after each load). Fabrics that give off large amounts of fluff may also cause blockage.

To access the appliance drain pump, the service cover must first be opened (see steps below). With the service cover opened, proceed as follows:

- If the appliance has not been drained, try to drain it now. Firstly, turn the wash cycle selector knob to select the Spin programme, press the SPEED button to set the Spin programme off (all spinning speed value indicator lights go out on the display), then press the START/PAUSE button. Wait a few moments to let the pump drain the water from the drum. If the pump is totally blocked, the water will be unable to drain and the cycle will end.
- Shut off the tap so that no more water flows in and has to be drained. Switch the appliance off. Unplug the power plug.
- Open the drain filter cover.



- Use the pull-out drain hose located in the pump access opening to drain the remaining water into a suitable container (up to 5.3 U.S. gallons/20 litres of water may be drained). Pull the sealing cap from the hose and lay the hose over the side of the container and allow the water to finish draining from the drum. When finished, replace the sealing cap into the end of the hose and restore the hose to its storage location.



- Turn the pump cover counter-clockwise to remove it. A small amount of residual water may flow out when the cover is removed. Clean the interior of the pump housing, removing any debris or foreign objects. Check to ensure the impeller at the back of the pump housing can now turn freely. Remove any lint, debris, or detergent residue from the threads of the pump cover and the pump cover housing. Reinstall the pump cover by screwing it tightly into position. The handle must be vertical.



- Close the drain filter cover. Wipe up any spilt water.



Product support

Troubleshooting

Your appliance could occasionally fail to work. Before contacting our customer service team make sure that the problem cannot be solved easily by using the following list.

Problem	Possible cause / solutions
There are color spots and oil stains in the drum	• The appliance requires a service wash. Run a **"Drum Clean"** wash cycle with no detergent and no laundry.
The machine smells	• Due to the use of rubber parts, the machine will have rubber smell at the beginning of use, but the rubber smell will gradually disappear during use.
The door cannot be opened	• The safety protection function is in operation, and the water temperature and/or water level are/is too high. • Whether the program has ended normally and whether there is power failure. • Is the child lock function activated? Turn off the child lock function. • Whether to select the delay end function? Turn off the delay end function.
The machine leaks from the dispenser	• The dispenser drawer is blocked with detergent and requires cleaning. • The water pressure is too high and requires turning down – turn down the tap on the water supply pipe slightly and try again. • The appliance is tilting forwards – It must be level when in its final position.
The machine leaks (other than dispenser)	• The water inlet hose is loose, check both the cabinet and tap ends . • The inlet hose is tight but still leaks, if so replace the rubber washers, or the water inlet hose is missing the rubber washer. • The drain hose is not fixed in properly. • In case of water leakage inside the machine, please turn off the power supply and contact the after-sales department for maintenance
The machine does not swtich on	• The appliance is not plugged into the socket fully, or not enough to make contact. • There is not power to the socket, or the fuse has blown in the mains plug.
The wash cycle does not start	• The door is not closed properly. • The **POWER** ⏻ button has not been pressed. • The **START/PAUSE** ▷|| button has not been pressed. • The water tap has not been turned on to allow water to flow into appliance. • A **Delay end** function has been set.
The machine does not fill with water, the detergent cannot flow into the drum or "E02" appears in the display	• The water inlet hose is kinked, twisted and bent. • The water inlet hose is not connected to the water supply. • The water pressure is too low. • The water tap has not been turned on to allow water to flow into the machine. • There is no water supply to the house. • The mesh filter in the water inlet hose and/or water inlet valve are/is blocked. • The faucet and/or water supply pipe are/is frozen. • The delay end function is selected so that the machine does not enter water • The **START/PAUSE** ▷|| button has not been pressed. • There is enough water in the drum already.
Discharge the water when the program is started	• This is not a fault. Please do not open the door to pour the water directly into the drum before the program runs, otherwise the machine may discharge the water which has been poured into the drum when the program is started,

Product support

Troubleshooting

Problem	Possible cause / solutions
The water level is too low when the machine is washing	● This is not a fault. The water consumption in wash cycle of this appliance is relatively little, the water level in wash cycle is lower than other type washing machine normally.
Make up water during wash cycle operation	● If the water level drops, the machine will make up water automatically. ● When the amount of washing clothes is too large, the appliance may make up water automatically several times during wash cycle operation.
There is too much foam in drum or the foam overflow from detergent dispenser	● The detergent is not suitable for machine washing (it should display the text "for washing machines" or "hand and machine wash" or the like). ● Too much detergent was used – less detergent is required in soft water.
The high-speed spinning needs to be repeated many times	● Due to the different types and materials of the laundry, the load balancing system of the appliance may wobbling and dispersing the clothes for many times to prolong the spinning time. This is a normal phenomenon, not a machine failure.
The machine does not spin	● The Spin Speed is turn off by pressing the SPEED button to set all spinning speed value indicator light go out on the display.
The machine vibrates a lot during the spin cycle	● The feet have not been adjusted, enabling the machine to rock. ● New Installation – Either the Transit Bolts including the plastic spacer, or the Polystyrene Packaging have not been removed when installing the machine. ● The appliance is trapped between cabinets and/or walls. ● The load is in a slight out of balance condition and the appliance is spinning, but at a lower speed.
The spin effect is not ideal.	● When washing less clothes, such as a pair of jeans, a sweater, a bath towel, etc., the machine may not complete the spinning process due to balance protection. ● If the load is in a slight out of balance condition and the appliance is spinning, but at a lower speed, not at the default spin speed of the cycle or the spin speed setting for the cycle.
The machine does not drain , drains slow or "E03" appears in the display	● The top of the drain hose is too high – It must be fitted at a height between 65 and 100 cm from the floor。 ● The pump filter is blocked. ● The drain hose is kinked , twisted or bended. ● The drain hose is blocked or frozen.
The program time stops counting down before entering high-speed spinning process	● This is not a fault. The load balancing system of the appliance wobbling and dispersing the clothes in the drum for a long time to achieve balance and complete high-speed spinning; In the process of wobbling and dispersing, the program time stops counting down before the appliance entering high-speed spinning process.
The program takes too long	● Program times will vary due to water pressure, the incoming water temperature and if the wash load goes out of balance. This will increase the program times accordingly (see "The high-speed spinning needs to be repeated many times").
The machine is noisy	● There will always be some motor, pump and drum noise during spin. ● The washing machine touches other objects. ● The foreign matters such as hairpins or metal objects fall in drum or tub.

Product support

Troubleshooting

Problem	Possible cause / solutions
The machine continuously fills with water and continually drains away	● The top of the drain hose is too low – It must be fitted at a height between 65 and 100 cm from the floor (see "Installation"). ● The end of the drain hose has been pushed too far down the standpipe, the hose elbow should be fitted 4' (100mm) from the end of the drain hose. ● The end of the drain hose is submerged in the discharged water.
The discharged water flows back into the appliance	● If the end of the drain hose touches the discharged water (water drained from washer), it (the discharged water) can be sucked back into the appliance and may damage the appliance or textiles.
The local part of the control panel is heated	● This is the slight heating effect of the electronic components on the computer board on the back of the control panel.
General	● Your appliance contains sensors that monitor progress during the wash cycle (eg: Water level, Temperature, Out of balance loads, Wash time/progress). Normally, if your appliance successfully completes the cycle, there is unlikely to be anything wrong!

Product support

Troubleshooting

In case of the following faults, the fault state will be detected by the microcomputer system, with the buzzer sounds issued and the following fault codes displayed in the control panel:

Fault codes	Fault type	Possible cause / solutions
E02	No inlet water	● Check whether the faucet is turned on? Whether the water supply is cut off? Whether mesh filter in the water inlet hose and the water inlet valve are blocked? and whether the water inlet hose of the appliance is frozen? Eliminate the above fault causes. if the fault code still exists, please contact the service center for repair.
E03	Abnormal water drainage	● Clean the pump filter. ● Check whether the drain hose is bent, twisted or blocked? Eliminate the above fault causes. If the fault code still exists, please contact the service center for repair.
U4	Door lock malfunction	● The door is not closed in place, and the door lock does not work normally. Close the door again, turn the wash cycle selector knob to the "OFF" position ⏻ to turn off the power supply, and then turn the wash cycle selector knob to select any wash program and press the START/PAUSE ▷|| button to restart the program. Eliminate this fault causes. If the fault code still exists, please contact the service center for repair. ● If the fault code displays and cannot open the door, door lock may be failure, please contact the service center for repair.
H	The temperature in the drum is high	● Press the START/PAUSE ▷|| button to suspend the appliance operation and wait for several minutes. When the temperature in the drum drops to a safe range and the fault code on the display is removed, press the START/PAUSE ▷|| button to continue the rest of the program. If the fault code still exists, please contact the service center for repair.
EXX	Other faults	● Turn the wash cycle selector knob to the "OFF" position ⏻ to turn off the power supply, unplug the power cord, and contact the service center for repair as soon as possible.

IMPORTANT: Be sure to check the fault cause and eliminate the fault before pressing the START/PAUSE button again. If the fault code is removed, the appliance will continue to run, and if the fault code still exists, please unplug the power cord and call our customer service centre for help as soon as possible.

Remember, you will be charged for a service call for problems caused by incorrect installation, as indicated on pages 6 to 12. Not emptying contents from pockets may cause pump or drain hose blockages, or may damage the machine. Do not wash items that do not have a wash label, or wash items that are not intended to be machine washable.

Product support

Product fiche

asento

Model: AWM1014W

Parameter	Value		Parameter	Value	
Rated capacity (a) (kg)	10.0		Dimensions in cm (a),(c)	Height	85
				Width	60
				Depth	58
Energy efficiency index (EEI_W)	36.3		Energy efficiency class (b)	A	
Washing efficiency index (a)	1.031		Rinsing effectiveness (g/kg) (b)	5.0	
Energy consumption in kWh per cycle, based on the eco 40-60 programme at a combination of full and partial loads. Actual energy consumption will depend on how the appliance is used.	0.359		Water consumption in litre per cycle, based on the eco 40-60 programme at a combination of full and partial loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water.	51	
Maximum temperature inside the treated textile (a) (°C)	Rated capacity	31	Weighted remaining moisture content (a) (%)	62	
	Half	25			
	Quarter	20			
Spin speed (a) (rpm)	Rated capacity	1400	Spin-drying efficiency class (b)	C	
	Half	1400			
	Quarter	1400			
Programme duration (a) (h:min)	Rated capacity	3:58	Type	free-standing	
	Half	2:59			
	Quarter	2:59			
Airborne acoustical noise emissions in the spinning phase (a)(dB(A) re 1 pW)	76		Airborne acoustical noise emis sion class (a) (spinning phase)	B(d)	
Off-mode (W) (if applicable)	0,50		Standby mode (W) (if applicable)	0,50	
Delay start (W) (if applicable)	4,00		Networked standby (W) (if applicable)	—	
Minimum duration of the guarantee offered by the supplier (a),(c):				6months	
This product has been designed to release silver ions during the washing cycle				NO	

Additional information:
(a) this item shall not be considered relevant for the purposes of Article 2(6) of Regulation (EU)2017/1369.
(b) for the eco 40-60 programme.
(c) changes to this item shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.
(d) if the product database automatically generates the definitive content of this cell, the supplier shall not enter these data.

(1)Commissions Regulation (EU) 2019/2023 of 1 October 2019 laying down ecodesign requirements for household washing machines and household washer-dryers pursuant to Directive 2009/125/EC of the European Parliament and of the Council, amending Commission Regulation (EU) No 1275/2008 and repealing Commission Regulation (EU) No 1015/2010(see page 285 of this Official Journal).

Product support

Product fiche

Entry method for new standard energy efficiency (EN60456:2016 + FprAA:2020) Eco 40-60, (Parameters are not adjusted by default)

10kg BLDC	20 ℃	Cotton	Wool	Quick wash
Rated capacity / kg	2	10	1	1
Program duration (h:min)	0:39	0:57	0:50	0:15
Energy consumption (Kwh/cycle)	0.26	1.27	0.22	0.11
Water consumption (L/cycle)	60	75	65	45
Max temperature / ℃	30	55	35	35
RMC	75%	70%	85%	75%
Spinning speed / rpm	700	900	500	700

Product support

Product fiche

- That the Eco 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40 °C or 60 °C, together in the same cycle, and that this programme is used to assess compliance with the EU eco-design legislation;
- That the most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and for a longer duration;
- That noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content;
- The values given for programmes other than the Eco 40-60 programme and the wash and dry cycle are indicative only.

Parameter	Unit	Value
Rated capacity for the eco 40-60 programme, at 0,5 kg intervals (c)	kg	10.0
Energy consumption of the eco 40-60 programme at rated capacity ($E_{c,full}$)	kWh/cycle	0.672
Energy consumption of the eco 40-60 programme at half rated capacity ($E_{c,1/2}$)	kWh/cycle	0.319
Energy consumption of the eco 40-60 programme at quarter rated capacity ($E_{c,1/4}$)	kWh/cycle	0.172
Weighted energy consumption of the eco 40-60 programme (E_c)	kWh/cycle	0.359
Standard energy consumption of the eco 40-60 programme (SCE_c)	kWh/cycle	0.988
Energy Efficiency Index (EEI_c)	—	36.3
Water consumption of the eco 40-60 programme at rated capacity ($W_{c,full}$)	L/cycle	74.0
Water consumption of the eco 40-60 programme at half rated capacity ($W_{c,1/2}$)	L/cycle	49.0
Water consumption of the eco 40-60 programme at quarter rated capacity ($W_{c,1/4}$)	L/cycle	36.0
Weighted water consumption (W_c)	L/cycle	51
Washing efficiency index of the eco 40-60 programme at rated capacity (I_w)	—	1,031
Washing efficiency index of the eco 40-60 programme at half rated capacity (I_w)	—	1,031
Washing efficiency index of the eco 40-60 programme at quarter rated capacity (I_w)	—	1,031
Rinsing effectiveness of the eco 40-60 programme at rated capacity (I_R)	g/kg	5,0
Rinsing effectiveness of the eco 40-60 programme at half rated capacity (I_R)	g/kg	5,0
Rinsing effectiveness of the eco 40-60 programme at quarter rated capacity (I_R)	g/kg	5,0
Programme duration of the eco 40-60 programme at rated capacity (t_c)	h:min	3:58
Programme duration of the eco 40-60 programme at half rated capacity (t_c)	h:min	2:59
Programme duration of the eco 40-60 programme at quarter rated capacity (t_c)	h:min	2:59
Temperature reached for minimum 5 min inside the load during the eco 40-60 programme at rated capacity (T)	°C	31
Temperature reached for minimum 5 min inside the load during the eco 40-60 programme at half rated capacity (T)	°C	25
Temperature reached for minimum 5 min inside the load during the eco 40-60 programme at quater rated capacity (T)	°C	20
Spin speed in the spinning phase of the eco 40-60 programme at rated capacity (S)	rpm	1400
Spin speed in the spinning phase of the eco 40-60 programme at half rated capacity (S)	rpm	1400
Spin speed in the spinning phase of the eco 40-60 programme at quarter rated capacity (S)	rpm	1400
Weighted remaining moisture content (D)	%	62,0
Airborne acoustical noise emissions during eco 40-60 programme (spinning phase)	dB(A) re 1 Pw	76
Power consumption in 'off mode' (P_o) (if applicable)	W	0,50
Power consumption in 'standby mode' (P_{SM}) (if applicable)	W	0.5
Does 'standby mode' include the display of information?	—	No
Power consumption in 'standby mode' (P_{SM}) in condition of networked standby (if applicable)	W	——
Power consumption in 'delay start' (P_{DS}) (if applicable)	W	4,00

Product support

warranty

This product is guaranteed for 12 months from the date of original purchase.

Any defect arising from faulty materials or workmanship will be repaired free of charge, or where applicable, the product will be replaced or the purchase price refunded.

This 1-year manufacturer's warranty applies subject to the following conditions:

- The product is correctly installed and operated in line with the instructions in this manual.
- The warranty does not cover accidental damage, misuse, or consumable parts such as knobs or cabinet components.
- The appliance is for domestic use only.
- The warranty is void if the product is resold or has been repaired by an unauthorised or inexperienced technician.
- The manufacturer accepts no liability for loss or damage resulting from product failure.
- Specifications may change without notice.
- This warranty is in addition to and does not affect your statutory rights.

Please keep your proof of purchase safe, as it will be required if you need to make a claim.

Customer Service: 01204 672408
customerservice@asento.co.uk
Manufactured for:
AO Retail Limited, 5a The Parklands, Lostock, Bolton, BL6 4SD, UK
Asento is a trademark licensed to AO Retail Limited

Product support

support

If you require any technical guidance, or your appliance is not operating as expected, please refer to the “Troubleshooting” section of this user manual.

Your asento product is covered by a 12-month warranty against faults and breakdowns. If you need support, please contact our customer care team on 01204 672408.

To help us assist you quickly, please have your product details ready.

model reference ----------

serial number ----------

date of purchase ----------

Lines are open Monday to Friday 8am - 7pm and Saturday to Sunday 8am - 5pm. Local call rates apply and additional charges may vary depending on your provider.

For training and quality purposes, calls may be recorded or monitored

Customer Service: 01204 672408
customerservice@asento.co.uk
Manufactured for:
AO Retail Limited, 5a The Parklands, Lostock, Bolton, BL6 4SD, UK
Asento is a trademark licensed to AO Retail Limited

Product support

disposal

Declaration of Conformity
This appliance conforms to all relevant standards applicable to domestic appliances sold in the UK.

Waste Electrical and Electronic Equipment (WEEE)
This appliance is marked in accordance with European Directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE). The crossed-out wheelie bin symbol indicates that this product must not be disposed of with household waste.

Instead, it should be taken to an appropriate collection point for the recycling of electrical and electronic equipment. By disposing of this product correctly, you help prevent potential harm to the environment and human health.

Disposal must be carried out in accordance with local waste and environmental regulations.

For more information on treatment, recovery, and recycling, please contact your local authority, household waste disposal service, or the retailer from whom the product was purchased.



Customer Service: 01204 672408
customerservice@asento.co.uk
Manufactured for:
AO Retail Limited, 5a The Parklands, Lostock, Bolton, BL6 4SD, UK
Asento is a trademark licensed to AO Retail Limited